




STP Keystone Jack Instruction

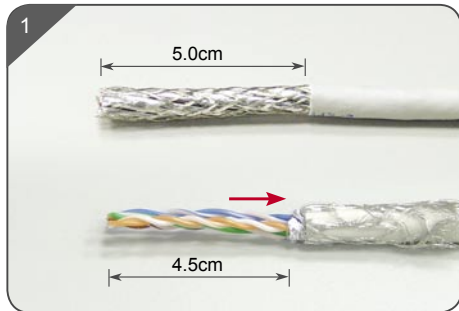


- Strip about 5.0cm of cable jacket.
Roll back the copper braid when stripping the cable.
Cut each pair's aluminum foil about 4.5cm.

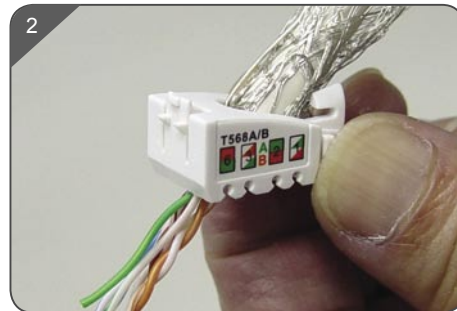


- According to color code, push each untwisted pair all the way down into the cap slots.

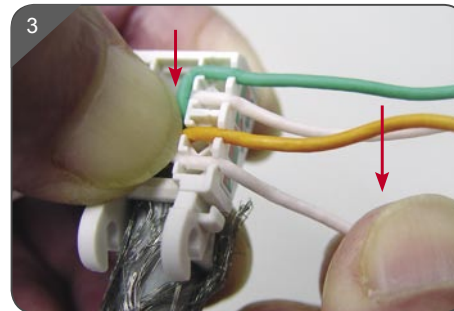

- Arrange the wires.

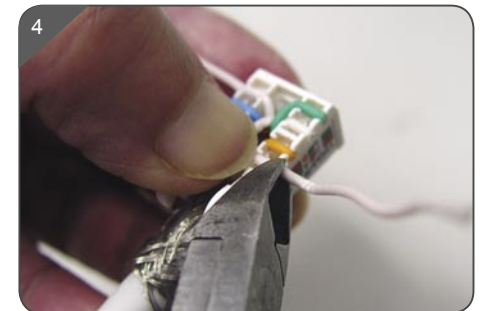


- Cut off redundant wires edgeways.

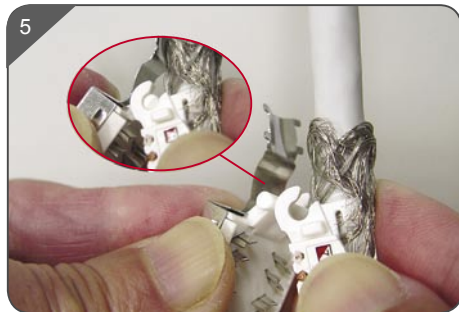


- Join the cap axis hole with the axis beam of the housing, the wired cap can rotate back and forth.




- Put keystone into holder.

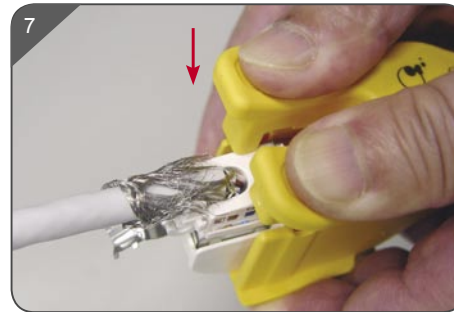

- Clamp down.

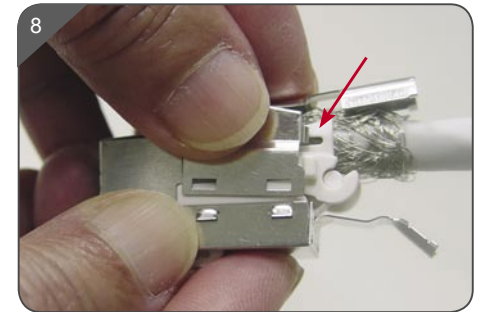

- Place shield guides into the wired-cap slot.

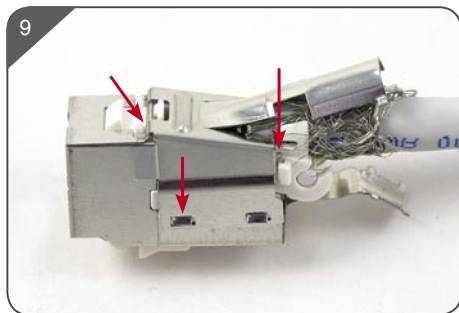

- Push to click shield knobs into the shield base.



- Push shield cap and shield base to touch copper braid.
Place the cable-tie and cut the tail after tied down the cable.



- Complete termination.



- Clamping tool.

