



180° Cat.6 STP Keystone Jack Instruction


Mounting:

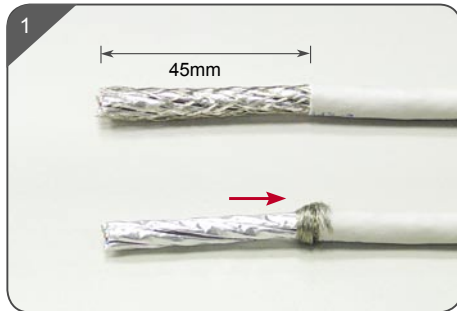


- 1-1 Strip the outer plastic jacket 45 mm lengths.
- 1-2 Roll up copper braid over the aluminium foil.

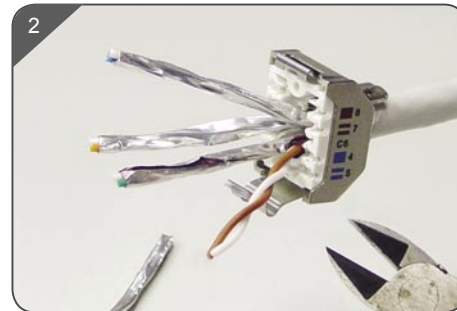


- Cut each single wire's aluminium foil off.

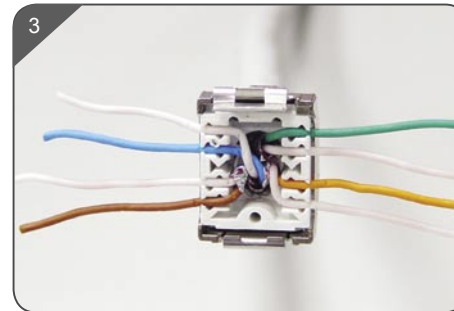


- Arrange the wires according to the color code and tuck down the wires into groove.

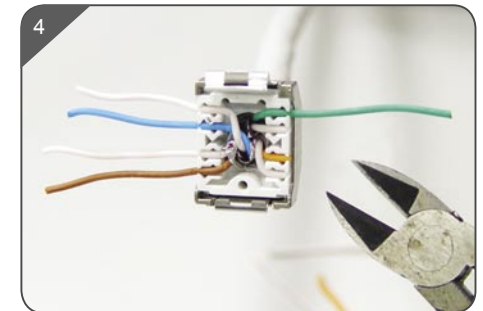


- Cut off redundant wires edgeways.

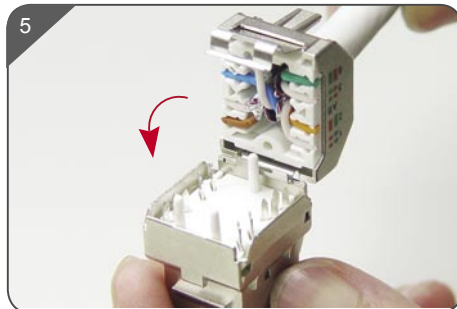


- Place cover into the housing

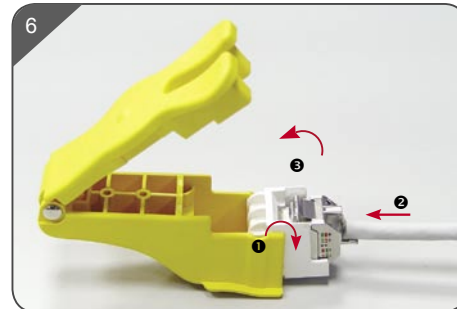


- 1. Turn over the white holder.
- 2. Place housing in the holder.
- 3. Pull up.

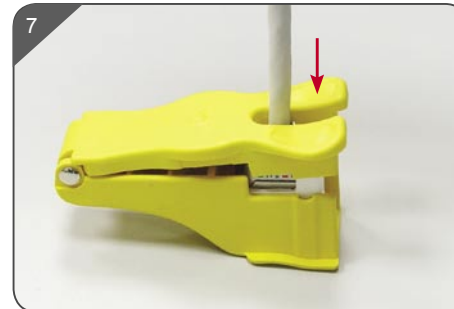

- Clamp down.

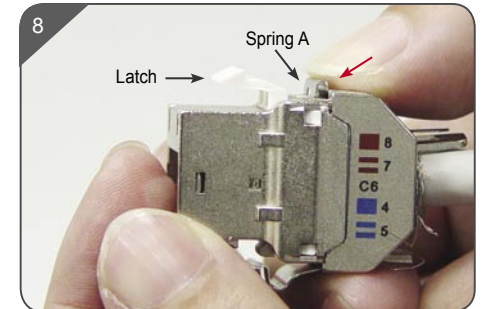

- Push "Spring A" and make sure it fully click (you will hear a Ka sound) with the housing.

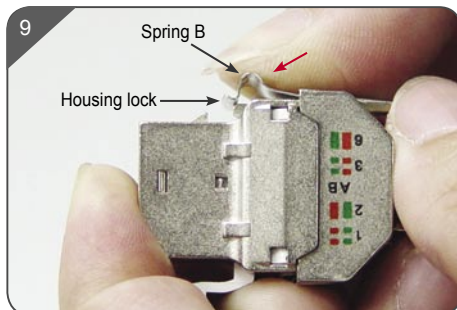


- Push "Spring B" into the housing lock.




- Complete termination.

Dismounting:

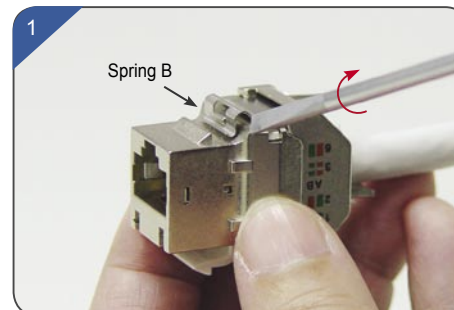

- Revolve and pry the "Spring B" open with a "-" screwdriver.

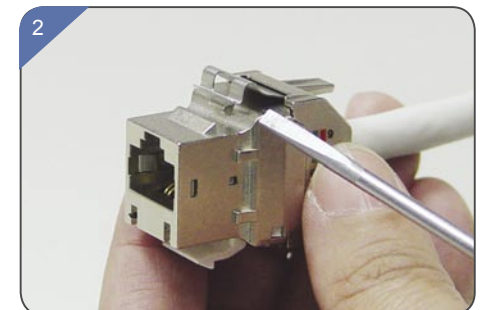

- Dismount "Spring B" from the housing lock.

